



Performance Cold Air Intake Kit

Part Number: 837-782

**1994-2001 Acura Integra GS/RS/LS 1.8L
Non-VTEC engine ONLY**

Installation Instructions

For technical inquiries please email us at tech@hpsperformance.com

In the email, please include the following information for faster response:

- Year / Make / Model / Engine of your vehicle
- If it is a fitment issue, please include pictures showing the fitment problem
- If there are missing parts, please list the part number(s) from the bill of materials on the 2nd page
- Optional but recommended – Your contact phone number and preferred call back time

You can also give us a call via 626-747-9200 for tech support Monday-Friday, 9:00am-5:00pm Pacific Time.

Bill of Materials

Kit Number: 837-782

Line #	Description	Part Number	Qty
1	Intake Pipe	529-974	1
2	Intake Pipe	529-975	1
3	L Bracket	530-256	1
4	Z Bracket	530-951	1
5	2.75" Air Filter	HPS-4340	1
6	Silicone Coupler, 2.75", 2.5" Long	P3SC-275-L25	2
7	Embossed Hose Clamp, 70mm - 90mm	EMSC-70-90	4
8	Rubber Vibration Mount M6 1/2" Tall	HW-RM6-50	1
9	Rubber Vibration Mount M6 1" Tall	HW-RM6-100	1
10	M6 Flat Washer 16mm OD	HW-FW6L	4
11	M6 Flange Nut	HW-N6	2
12	Bolt, M6 x 1.0, 12mm Long	HW-B6-12	2
13	3/8" EPDM Hose	EPDM-038	9 inches
14	5/16" Heater Hose	HTHH-032-BLK	14 inches
15	Fuel Injection Clamp, 13mm - 15mm	FIC-13	2
16	Embossed Hose Clamp, 10mm - 16mm	EMSC-10-16	2
17	Vinyl Foam Strip Adhesive-Back, Black, 1" Wide, 1/8" Thick	8512K65	2 inches

- Before installing any parts of this intake kit, please read the instructions thoroughly.
- Verify the contents of this intake kit before disassembling your vehicle.
- Report any defective or missing parts to HPS directly. The HPS dealer you purchased this product from might not have the replacement parts you need.
- Installation requires moderate mechanical skills. A qualified mechanic is highly recommended.
- Do not attempt to install the intake kit while the engine is hot.
- This installation may require the removal of coolant lines that may be hot.
- For technical inquiries, please email us at tech@hpsperformance.com

PLEASE READ CAREFULLY BEFORE INSTALLATION!


This installation is not for the novice customer. Install this product with EXTREME caution! Misuse of this product can destroy your engine! If you are not mechanically inclined, please have a professional automotive mechanic install this kit.

NOTE: HPS holds no responsibility for any engine damage that results from misuse of this product.

GETTING STARTED

1. Turn the ignition OFF and disconnect the vehicle's negative battery cable. If the engine has run within the past two hours, let it cool down.


NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicle's anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicle's anti-theft code. We also highly recommend NOT discarding any stock parts after the installation.

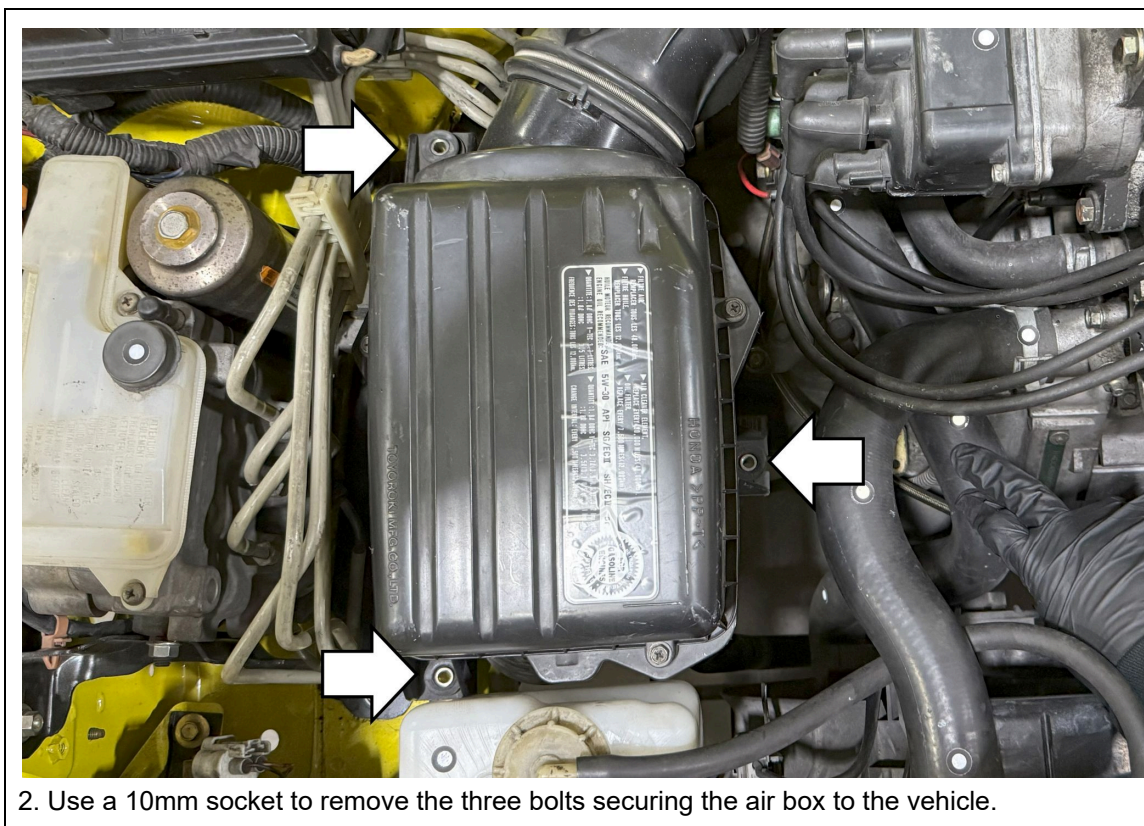

2. Use a 10mm socket to remove the three bolts securing the air box to the vehicle.




3. Disconnect the breather hose and pipe between the valve cover and air intake tube.

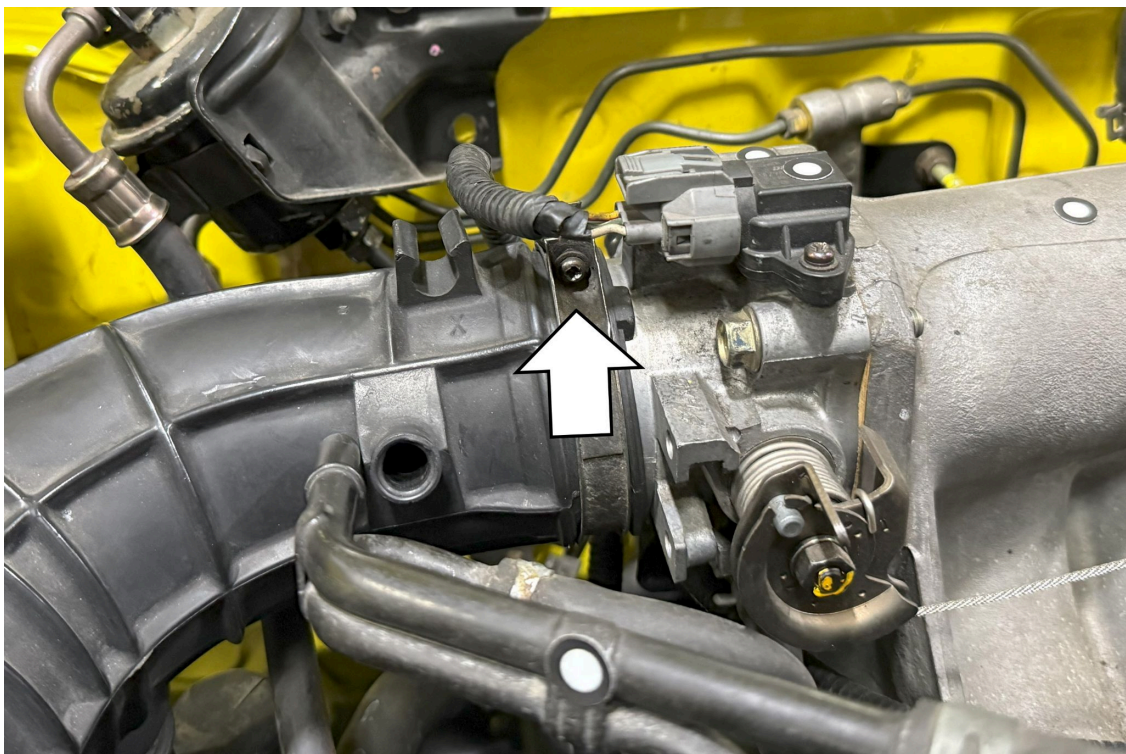

4. Loosen the clamp securing the intake tube to the throttle body.



5. Remove the intake tube and air box from the engine bay.

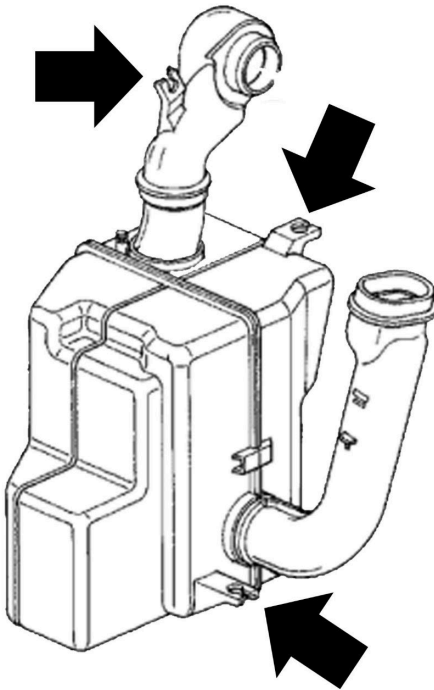


6. Remove the stock air intake resonator located behind the front passenger side wheel well.



7. Prepare the provided silicone hose with the provided clamps as shown.




8. DO NOT PROCEED IF COOLANT IS HOT. BE PREPARED TO CATCH ANY SPILLED COOLANT USING A BUCKET OR DRIP TRAY. Disconnect the hose located at the bottom of the throttle body indicated in the image.

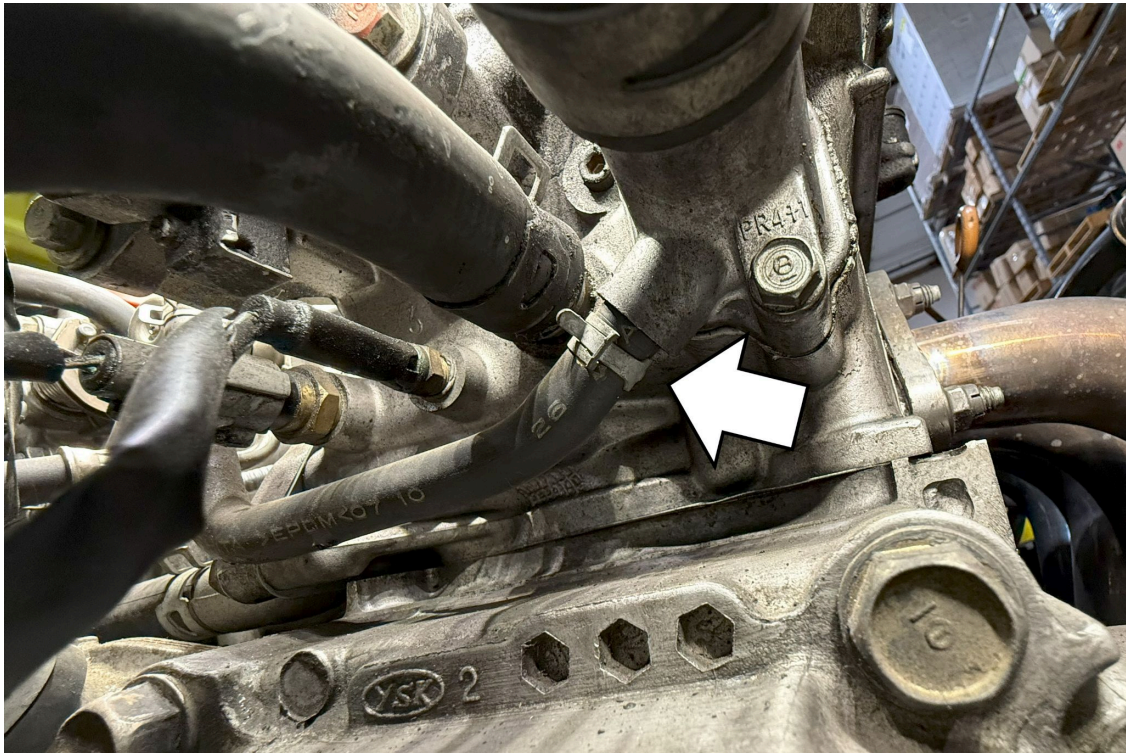


9. Disconnect the hose on the engine located below the upper water neck.




10. Remove the coolant/breather pipe from the vehicle.

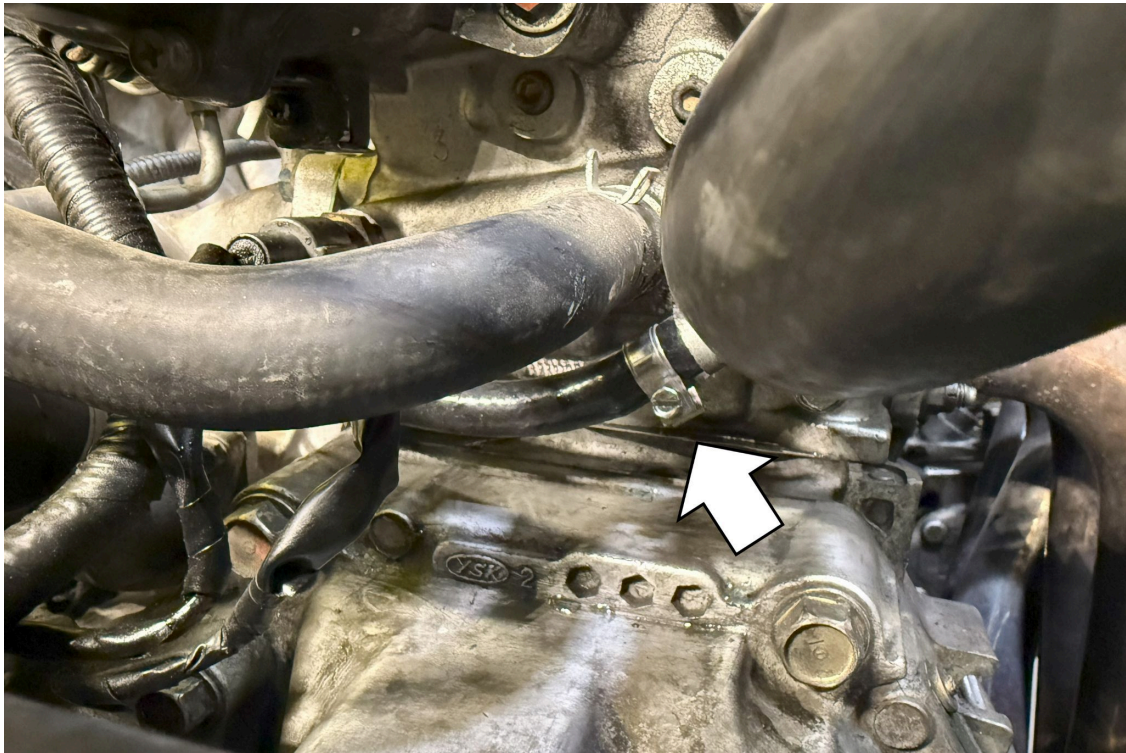

11. Install the provided silicone hose onto the upper water neck.

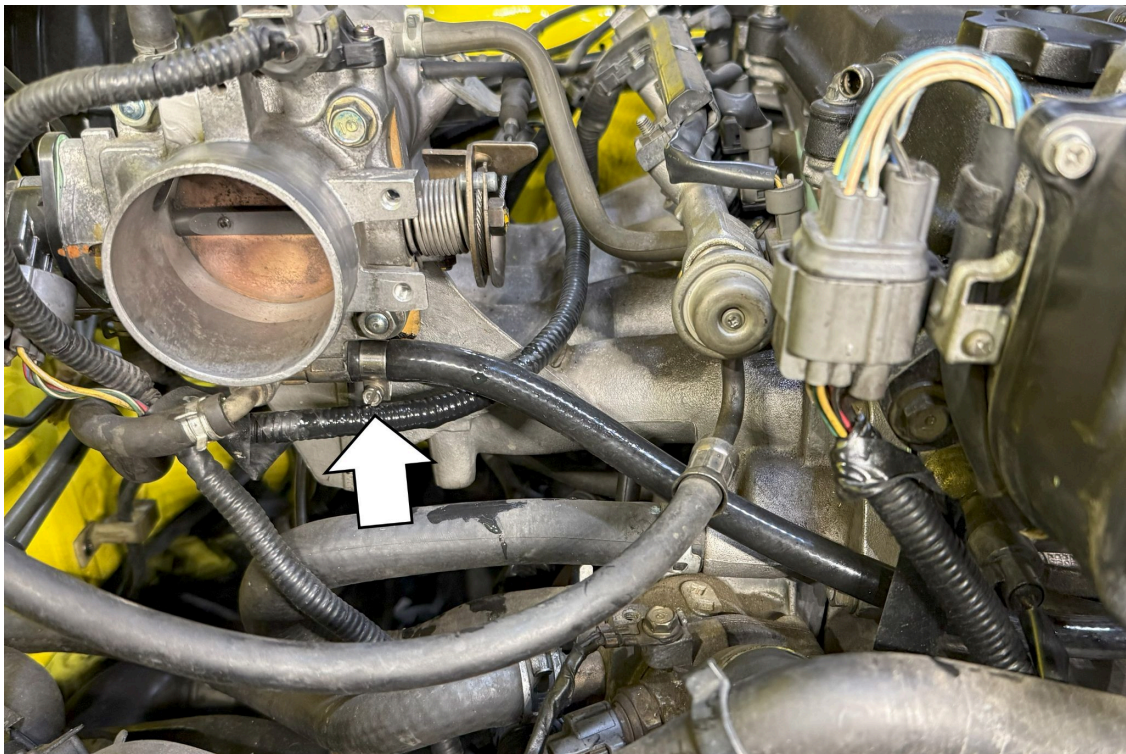

12. Install the opposite side of the silicone hose onto the nipple on the throttle body. Fasten both hose clamps securely.

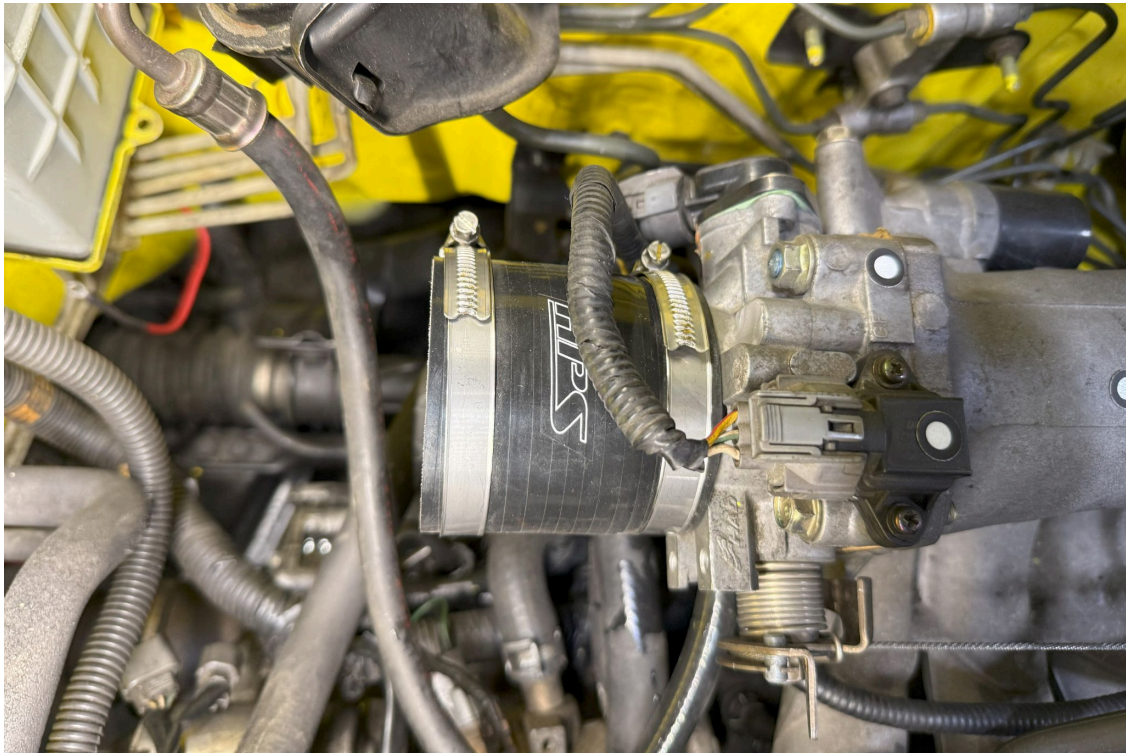


13. Install the silicone coupler onto the throttle body and secure with the provided embossed clamps.




14. Install the ½" tall rubber vibration mount onto the upper intake pipe.




15. Mount the provided Z bracket onto the rubber vibration mount using the provided M6 nut and washer.

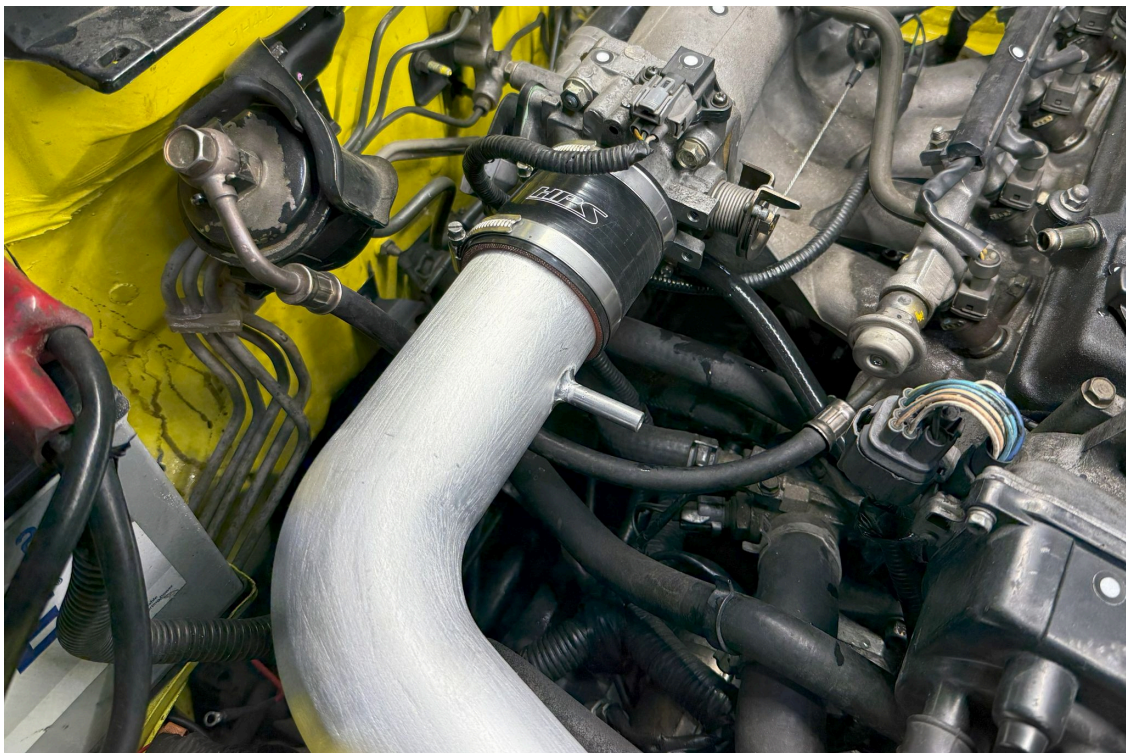

16. Connect the HPS intake pipe onto the silicone coupler on the throttle body.

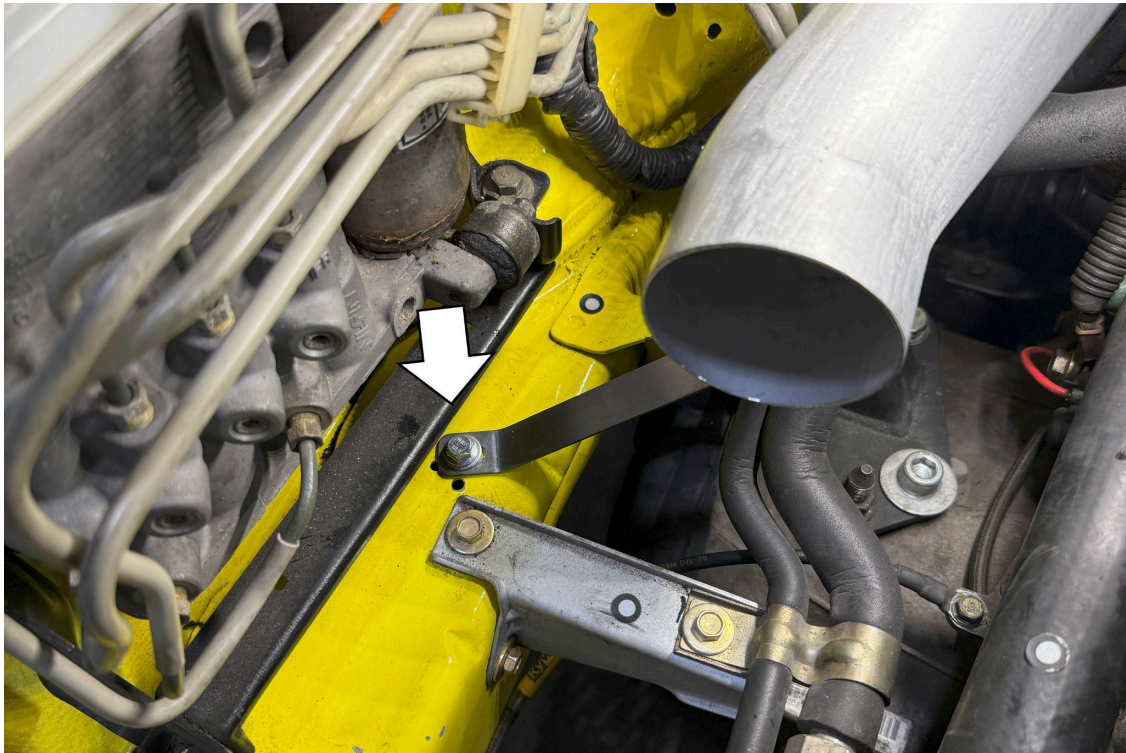


17. Using a provided M6 bolt and washer, fasten the bracket onto the threaded hole in the frame rail.

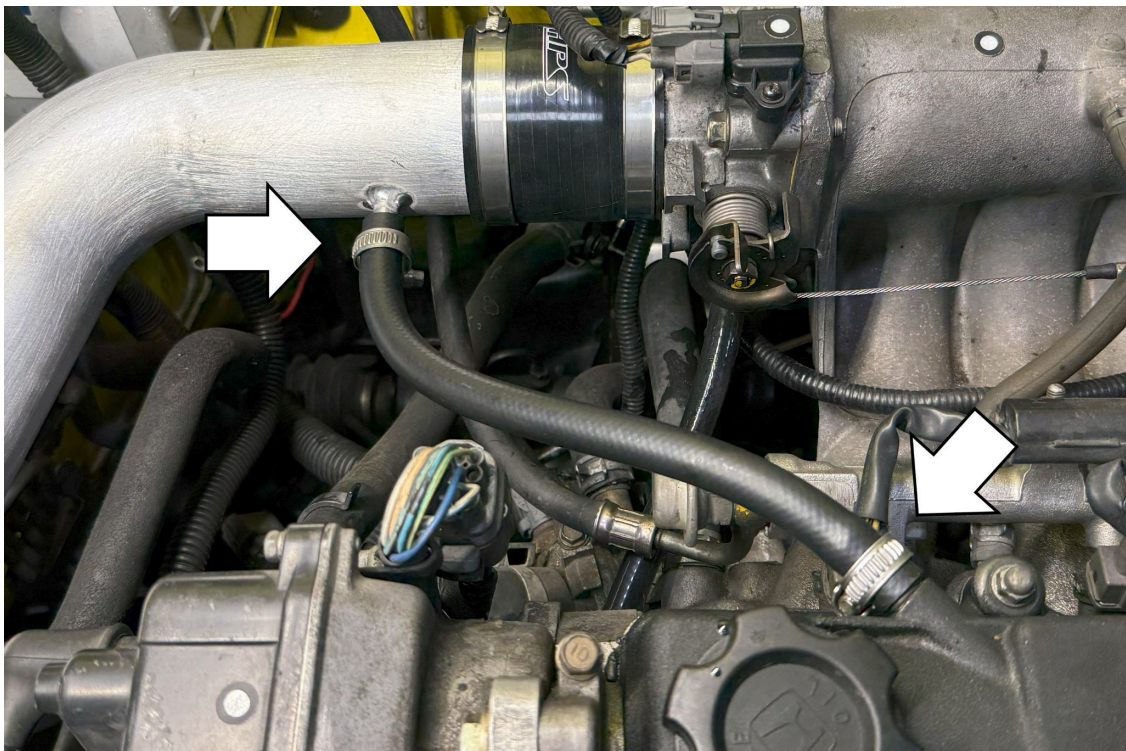


18. Connect the provided rubber vent hose onto the valve cover and intake pipe, then secure both ends with the provided embossed clamps.




19. Install the 1" tall rubber vibration mount onto the bung on the lower intake pipe. Mount the L bracket onto the rubber vibration mount using the provided M6 nut and washer.

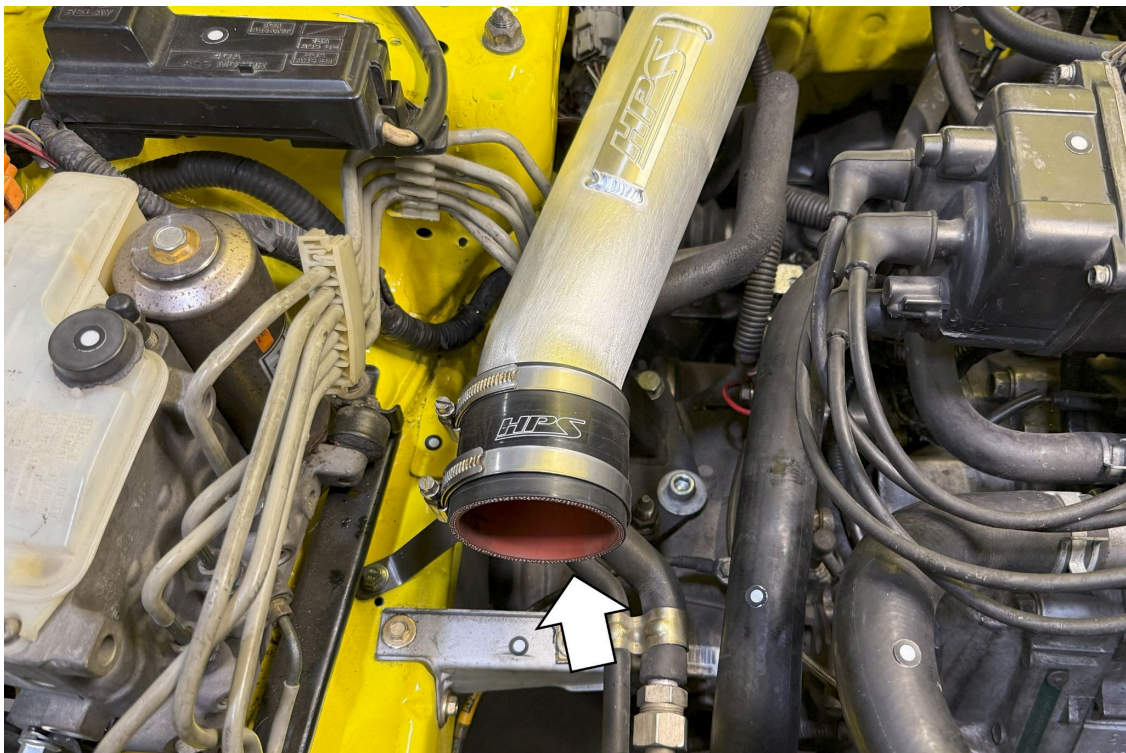


20. Place the remaining silicone coupler onto the end of the upper intake pipe along with the remaining embossed hose clamps.

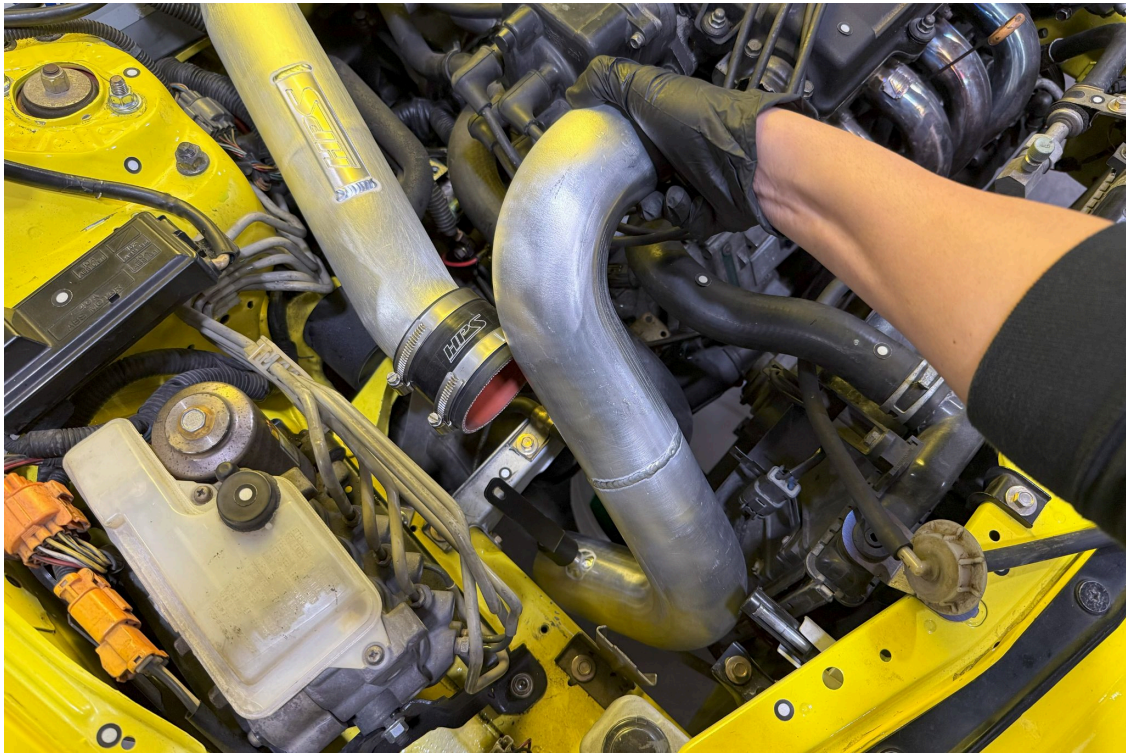


21. Feed the lower intake pipe through the top to the bottom of the vehicle.

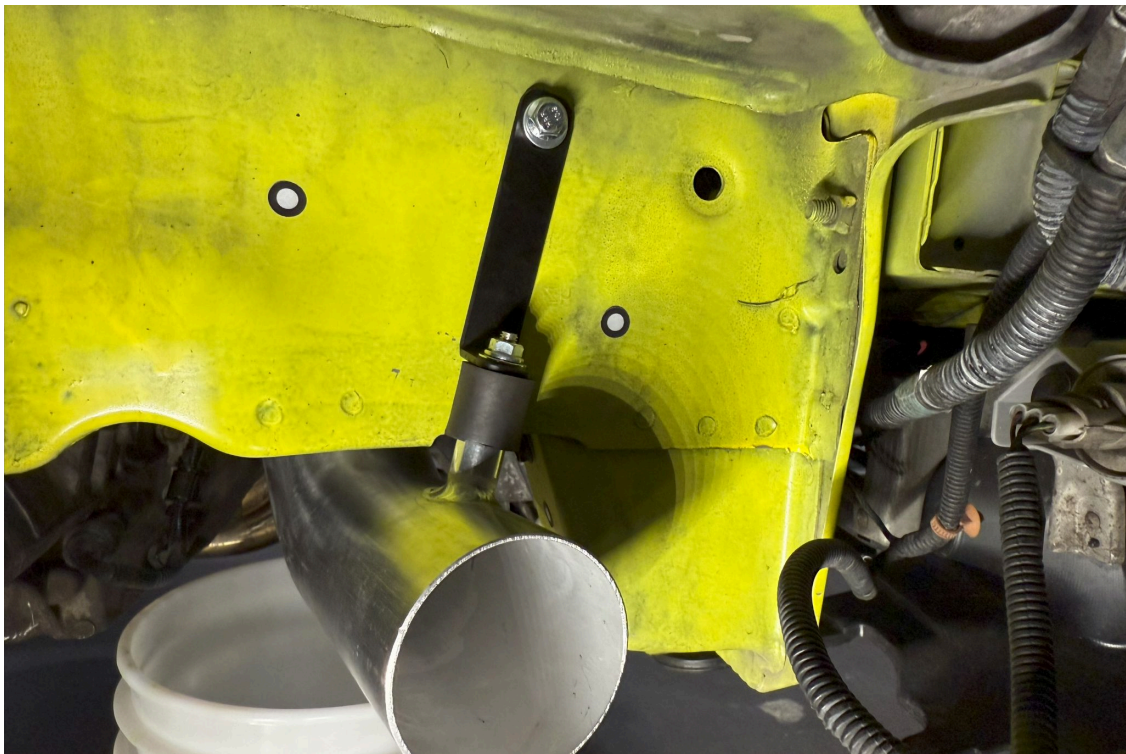

22. Mount the L bracket onto the frame rail.

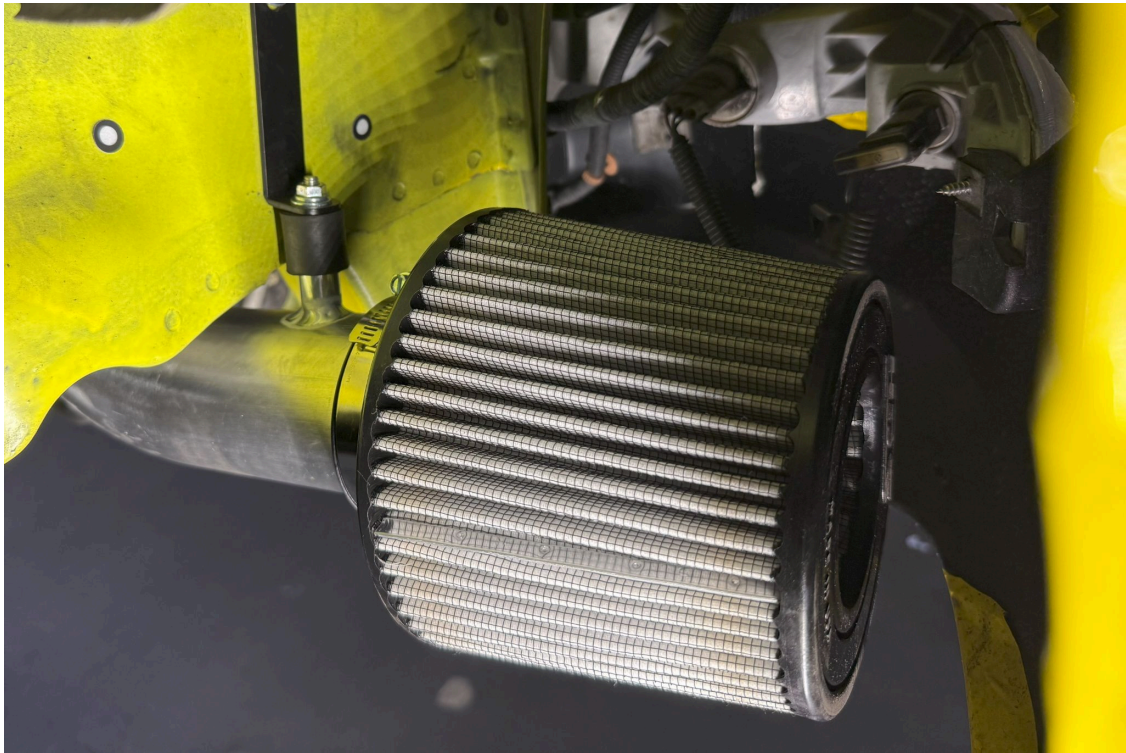

23. Install the provided air filter onto the end of the intake pipe.

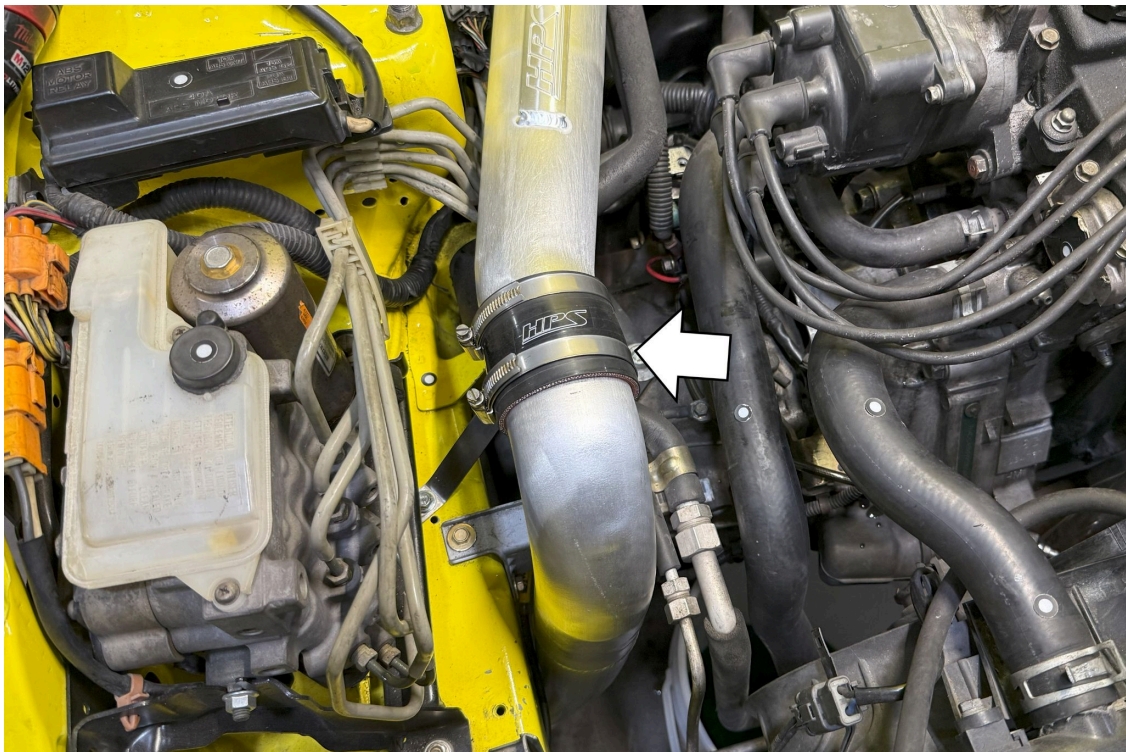

24. Connect the pipes together using the silicone coupler and fasten the clamps.

FINAL STEPS

Once the intake has been positioned, tighten all of the clamps and secure all of the parts.

Upon completion of the installation, reconnect the negative battery terminal before you start the engine. Double check to make sure everything is tight and properly positioned before starting the vehicle.

Start the engine. Let the car idle for 3 minutes. Perform a final inspection before driving. Listen carefully for any odd noises, rattles and/or air leaks prior to taking it for a test drive. If any problems arise go back and check the vacuum lines, hoses and clamps that may be causing leaks or rattles and correct the problem.

Periodically, recheck the alignment of the intake kit and make sure there is proper clearance around and along the length of the intake. Failure to follow proper maintenance procedures may cause damage to the intake and will void the warranty.



Also available for 1994-2001 Acura Integra 1.8L



**HPS Silicone Radiator Hose Kit
for GS, GS-R, LS, RS models
Part Number [57-1003](#)**



**HPS Silicone Radiator Hose Kit
for Type R model
Part Number [57-1207](#)**



**HPS Magnetic Drain Plug
Part Number [MDP-M14x150](#)**

Contact an authorized HPS Performance dealer or
visit us at hpsperformance.com for more details